

## Wall Mounted Touch Panel

Model No.: T11(IT), T12(IT), T13(IT), T14(IT)

4 Zone/1-4 color/Glass touch panel/Color wheel/AC input/DMX 512 and RF 2.4G signal output



CE RoHS EMC LVD RED


## Features

- Touch panel 4 zone 1-4 color DMX512 master, can also be used as 4 zone 1-4 color RF remote.
- DMX signal output, comply to standard DMX512 protocol, compatible with DMX decoder from any supplier.
- When used as RF remote, each zone can remote control multiple Skydance's 2.4G LED controllers.
- Ultra sensitive high strength glass touch panel with touch color wheel in the middle.
- Smooth and accurate color adjustment by touching the color wheel.
- Touch keys with chord tones and LED indicator.
- White & Black glass panel available.


## Technical Parameters

Model No.	T11(IT)	T12(IT)	T13(IT)	T14(IT)
Light type	Single color	Dual color	RGB	RGBW
Output DMX channel number	4	8	12	16
<b>Input and Output</b>				
Input voltage	100-240VAC			
Input current	Max 0.1A			
Output signal	DMX512, RF 2.4GHz			
<b>Safety and EMC</b>				
EMC standard (EMC)	ETSI EN 301 489-1 V2.2.3 ETSI EN 301 489-17 V3.2.4			
Safety standard(LVD)	EN 62368-1:2020+A11:2020			
Radio Equipment(RED)	ETSI EN 300 328 V2.2.2			
Certification	CE,EMC,LVD,RED			
<b>Warranty</b>				
Warranty	5 years			


## Mechanical Structures and Installations

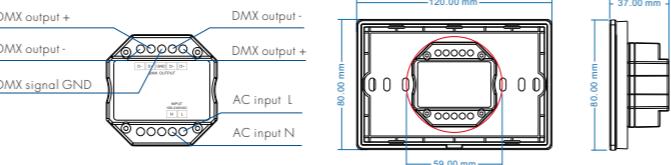

## Installation diagram:

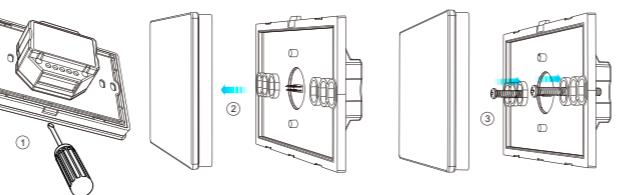

## Typical base as below:

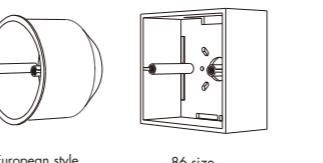

## Key function

T11(IT) Single color panel




Short press turn on zone light and select zone simultaneously, long press 2s turn off zone light.  
Short press multiple zone key fastly, will select multiple zone synchronously.  
4 zone control separately or synchronously, each zone could control multiple receivers.

T12(IT) Dual color panel




Short press turn on zone light and select zone simultaneously, long press 2s turn off zone light.  
Short press multiple zone key fastly, will select multiple zone synchronously.  
4 zone control separately or synchronously, each zone could control multiple receivers.

T13(IT) RGB panel

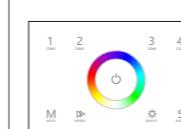

Short press turn on zone light and select zone simultaneously, long press 2s turn off zone light.  
Short press multiple zone key fastly, will select multiple zone synchronously.  
4 zone control separately or synchronously, each zone could control multiple receivers.

T14(IT) RGBW panel

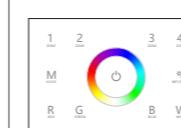

Short press turn on zone light and select zone simultaneously, long press 2s turn off zone light.  
Short press multiple zone key fastly, will select multiple zone synchronously.  
4 zone control separately or synchronously, each zone could control multiple receivers.

Note: After touch power key to turn off light, long press power key for 5 seconds will turn on or turn off tone.

## Touch Panel work as DMX512 master match RF remote

Touch panel 4 zone DMX512 master can also match with 4 zone RF remote (Optional).  
End user can choose the suitable match/delete ways. Two options are offered for selection:

## Use On/Off key

## Match:

Turn on light, turn off, immediately press the On/Off key of the panel for 5s,  
then press any zone key of the RF remote within 5s.  
The LED indicator fast flash 3 times  
means match is successful.

## Delete:

Turn on light, turn off, immediately press the On/Off key of the panel for 10s to delete all match,  
The LED indicator fast flash 6 times  
means all matched remotes were deleted.

## Touch Panel work as RF remote

Touch panel 4 zone remote can match with RF controller for the corresponding light type.  
End user can choose the suitable match/delete ways. Two options are offered for selection:

## Use the controller's Match key

## Match:

Short press match key, immediately press zone key of the touch panel.  
The LED indicator fast flash a few times  
means match is successful.






## Delete:

Press and hold match key for 5s to delete all match,  
The LED indicator fast flash a few times  
means all matched remotes were deleted.

## The address assignment of touch panel work as DMX512 master

After connect with DMX decoders, please set the DMX decoders address as below:

Model No.	T11(IT)	T12(IT)				T13(IT)				T14(IT)				
		WW	CW	R	G	B	R	G	B	W	R	G	B	
Zone 1 DMX decoder's address		1	2	1	2	3	1	2	3	4	5	6	7	8
Zone 2 DMX decoder's address		2	3	4	5	6	5	6	7	8	9	10	11	12
Zone 3 DMX decoder's address		3	5	6	7	8	9	10	11	12	13	14	15	16
Zone 4 DMX decoder's address		4	7	8	10	11	12	13	14	15	16			

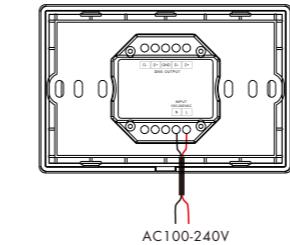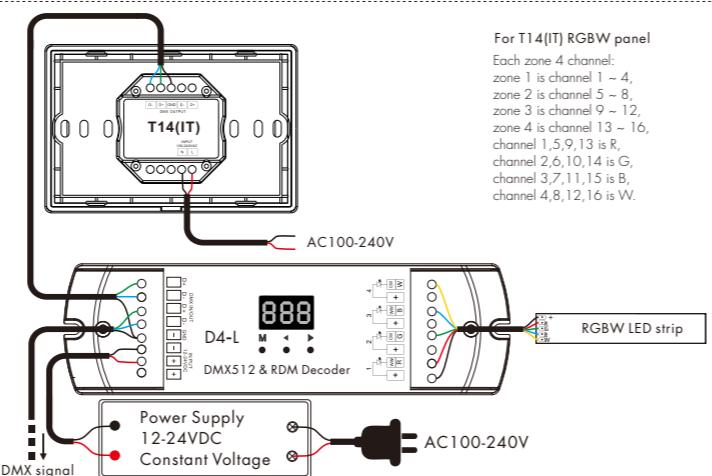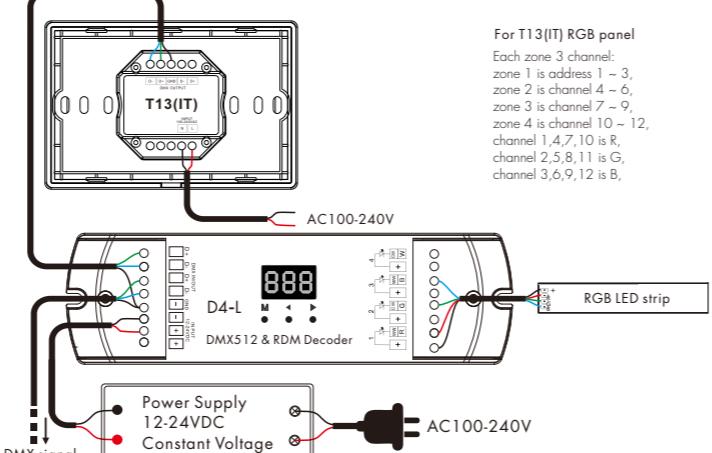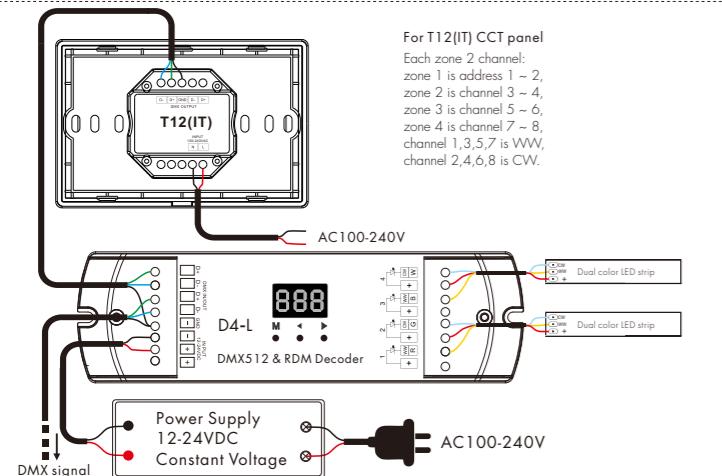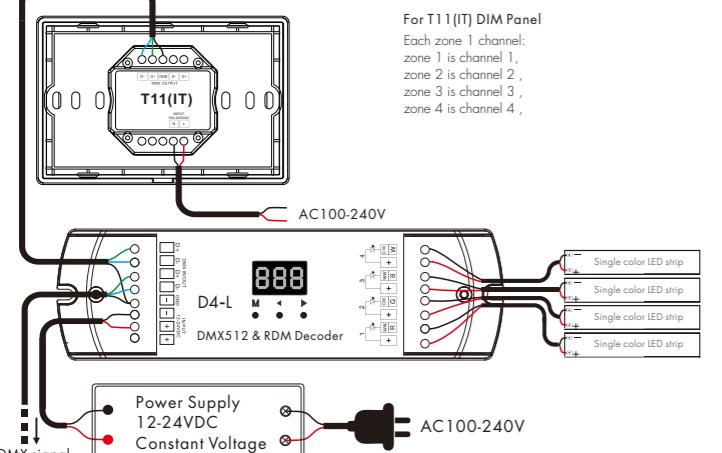

#### RGB/RGBW dynamic mode list (only for T13(IT) / T14(IT))

No.	Name	No.	Name
1	RGB jump	6	RGB fade in and out
2	RGB smooth	7	Red fade in and out
3	6 color jump	8	Green fade in and out
4	6 color smooth	9	Blue fade in and out
5	Yellow cyan purple smooth	10	White fade in and out

#### Malfunctions analysis & troubleshooting

Malfunctions	Causes	Troubleshooting
No light	1. No power. 2. Wrong connection or insecure.	1. Check the power. 2. Check the connection.
Wrong color	1. DMX decoder first address error. 2. Wrong connection of output wires.	1. Check the DMX first address. 2. Reconnect output wires.